



SiH-9.9kW-TH-PRO~50kW-TH Wiring diagram of 5-10parallel

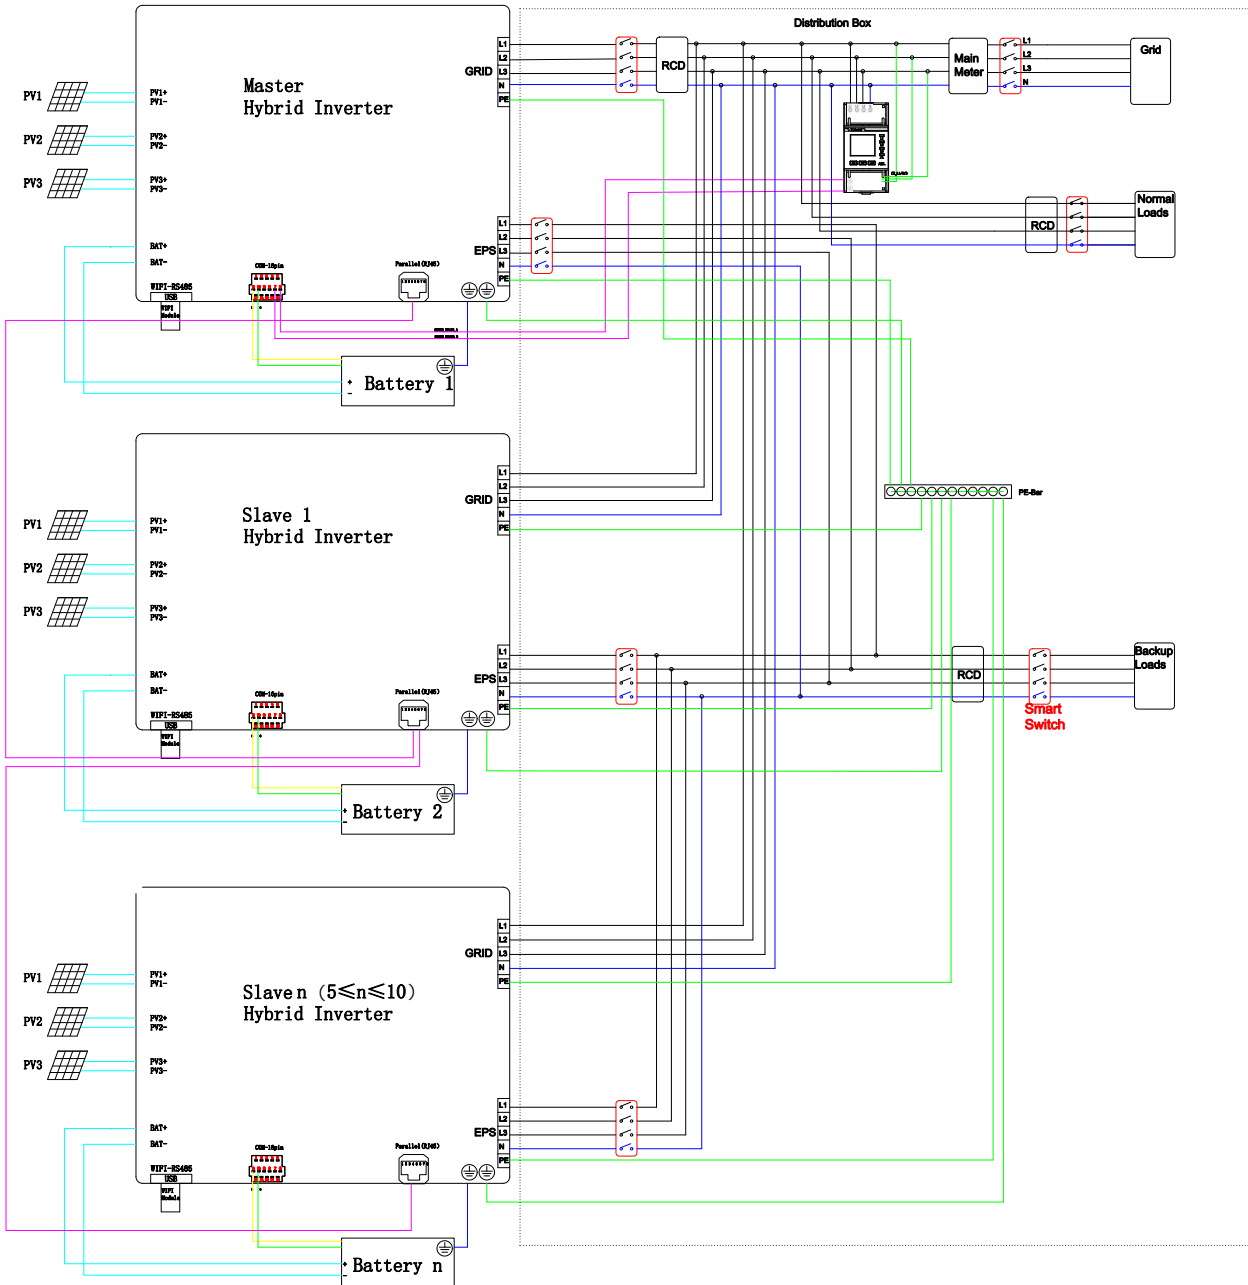

Note:

1) Use for the countrys of Europe, except Australia ;

2) For details specifications about MCB and RCD , please refer to the user manual

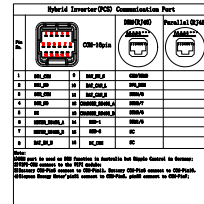

名称	序号	地址	备注
Battery ON (246)	1	0x0	Bat onds open
	2	0x1	Bat onds open
	3	0x000-1	130498A (PC3/HS/0x00)
	4	0x000-1	130498A (PC3/HS/0x00)
	5	0x000-1	130498A (PC3/HS/0x00)
	6	0x000-1	130498A (PC3/HS/0x00)
	7	0x000-1	130498A (PC3/HS/0x00)
	8	0x000-1	130498A (PC3/HS/0x00)